

BEHA CLASSIC PANELOVN
HC 5, HC 10, HC 15, HC 20

INSTALLASJON- OG BRUKERVEILEDNING
INSTALLATION AND USER GUIDE

BEHA

HC 5




HC 10



HC 15



 HC 20

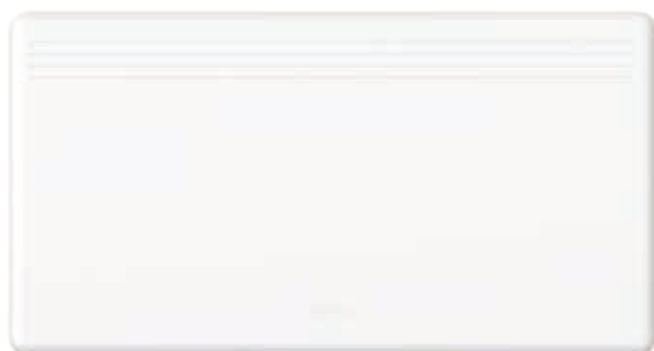

LANGUAGES:

NO	3
UK	9

INNHold

1.0 Teknisk informasjon	3
2.0 Sikkerhets informasjon	4
3.0 Installasjon	5
4.0 Bruk av ovnen	5
5.0 Stell og vedlikehold	7
6.0 Samsvar / Årsvirkningsgrad	7
7.0 Avfallshåndtering	8

Les bruksanvisningen nøye før bruk, og ta vare på den for senere bruk.
Bruksanvisningen ligger også på beha.no.

1.0 Teknisk informasjon

Fabrikkinnstilt temperatur er 22 grader. Termostaten kan justeres ned til 1 grader i ECO program. Maks temperatur er 35 °C. Ovnene er IP24 godkjent, og kan installeres på bad og vaskerom etter gjeldene forskrifter. Panelovnene har uketimer som kan brukes for å spare strøm.

1.1 Ved strømbryt

Ovnen går tilbake til den satte komfort temperatur.
For andre innstillinger se kapittel 4.8.

1.2 Åpen vindu-funksjon

Er åpent vindu funksjonen aktivert og temperaturen synker flere grader, i løpet av noen minutter, vil ovnen stoppe å varme. Etter 1 time går den tilbake til det valgte programmet den hadde før åpent vindu ble aktivert. Funksjonen kan også deaktiveres ved å trykke på åpent vindu knappen.

2.0 Sikkerhetsinformasjon

Når du bruker elektriske apparater, bør grunnleggende forhåndsregler alltid følges for å redusere risikoen for brann og personskader.

Les hele bruksanvisningen før ovnen tas i bruk.

1. Før bruk fjernes all emballasje.
2. Slå av bryteren og fjern støpslet fra stikkontakten når ovnen ikke er i bruk og ved rengjøring.

Denne ovnen er for rom oppvarming.

ADVARSEL! Ovnens blir varm under bruk. Ikke berør varme overflater. Vær ekstra oppmerksom ved tilstedeværelse av personer med reduserte fysiske, sensoriske eller mentale evner, personer med manglende erfaring og kunnskap, eller barn.

Barn fra 3 til 8 år, skal bare slå av/på apparatet, forutsatt at den har blitt plassert eller installert i sin tiltenkte vanlige stilling, og de har fått tilsyn eller instruksjoner om bruk av apparatet på en sikker måte og forstår farene som er involvert. Barn fra 3 til 8 år skal ikke koble til, regulere og rengjøre apparatet eller utføre brukervedlikehold.



Advarsel! For å unngå overoppheting må ovnen ikke tildekkes

Ovnen kan brukes av barn fra 8 år og oppover, personer med reduserte fysiske, sensoriske eller mentale evner, personer med manglende erfaring og kunnskap hvis de får tilsyn eller instruksjoner for bruk av ovnen. Instruksjonen må gis på en sikker måte, slik at farene involvert er forstått. Barn skal ikke leke med ovnen. Rengjøring og vedlikehold skal ikke gjøres av barn uten tilsyn.

Barn under 3 år skal holdes unna ovnen.

Ovnen må ikke brukes på plasser der det er støv, damp, gass, bensin, maling eller hvor

andre brannfarlige varer er lagret (eks. garasje). Må ikke brukes i eksplosjonsfarlige områder etc.

Advarsel! Bruk ikke ovnen i små rom hvor det er personer som ikke kan forlate rommet på egenhånd, med mindre de har konstant tilsyn.

Stikkontakten ovnen er tilkoblet skal være synlig og tilgjengelig.

Ovnen skal ikke plasseres rett under en stikkontakt. Er kabelen eller støpslet ødelagt skal ovnen ikke brukes. Kabelen må ikke komme i berøring med de varme overflatene på ovnen under bruk.

Kabelen skal ikke tildekkes av matter eller lignende. Kabelen skal ligge slik at den ikke blir tråkket på. Påse at ingen fremmede objekter er plassert i ventilasjonsgitteret da det kan forårsake elektrisk feil, brann eller ødelagt ovn.

Ved rengjøring, flytting eller når ovnen ikke er i bruk gjøres den strømløs ved først å slå den av med bryteren for så å trekke ut støpselet fra stikkontakten. Ikke dra i kabelen, men ta tak rundt støpselet.

Ikke ta på ovnen med våte hender.

Ovnen skal kun brukes i oppreist stilling.

Ovnen skal ikke repareres, demonteres eller modifiseres.

Er kabelen eller støpselet ødelagt må det byttes av service mann/kvinne eller tilsvarende kvalifisert person for å unngå fare.

 
Ikke bruk ovnen i umiddelbar nærhet av et badekar, dusj eller svømmebasseng. Fastmontert ovn skal installeres slik at bryter og kontrollpanelet ikke kan berøres av personer i badekar eller dusj.

Ikke bruk ovnen om den har synlige skader eller den har falt i gulvet.

Advarsel! Ovnene brukes unna hindringer som påvirkes av varme f.eks. møbler, gardiner, eller andre brennbare gjenstander.

Advarsel! Denne ovnen skal ikke styres fra en ekstern bryterenhet, for eksempel en timer, eller kobles til en krets som regelmessig slås på.

3.0 Installasjon

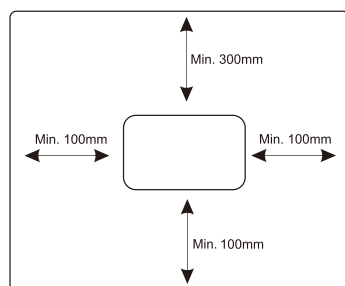


Ved montering brukes følgende avstander.

3.1 Elektrisk tilkobling og bruk

Før tilkobling påse at nettspenningen er 230-240V ~ 50-60 Hz. Ovnene tilkobles stikkontakt i det rommet den brukes i. Bruk ikke skjøteledning, da det kan medføre brannfare.

3.2 Monter ovnen

 - Fest veggfeste på veggen. Bruke vater slik at hullene er parallelle. Bruk en merkepenn for å markere hullenes posisjon.
- Bor hull i veggen med 8mm bor og sett inn plastpluggene.
- Fest veggfeste på veggen med skruene.
- Monter ovnen nede på veggfeste og skyv deretter ovnen inn på festene oppe. Bruk en flat skrutrekker og lås fast veggfestet med plastdetaljene oppe på veggfeste.

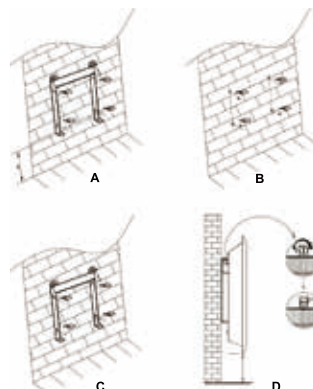

Advarsel! Avstanden fra underkant av ovnen til gulvet skal være minst 10cm

Advarsel! Husk å sjekke at det ikke er kabler eller annet skult i veggen der det borres.


Advarsel! Før det settes strøm på ovnen sjekk at den er ordentlig festet til veggfestet.

3.3 Størrelser på ovnene

Type	Watt	Høyde (mm)	Bredde (mm)	Dybde (mm)
Beha Classic HC 5	500	435	515	105
Beha Classic HC 10	1000	435	515	105
Beha Classic HC 15	1500	435	645	105
Beha Classic HC 20	2000	435	815	105

4.0 Bruk av ovnen

 4.1 Kontroll panel

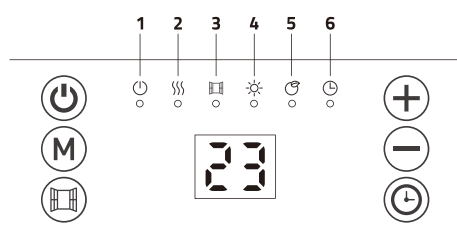

⏻	Standby
M	Program velger
🔧	Åpent vindu funksjon
+	Øke temperatur
-	Redusere temperatur
⌚	Timer

- ① Standby: Av / På
- ② Varmer status
- ③ Åpent vindu funksjon
- ④ Komfort program
- ⑤ ECO program
- ⑥ Timer

4.2 Hvordan bruke ovnen

Ovnen kobles til AC 230-240V 50-60Hz stikkontakt. Når bryteren aktiveres høres et beep. Indikatorlampen  vil lyse.

4.3 Fabrikk innstillinger

- Varme funksjon = Komfort program
- Fabrikkinnstilt temperatur: 22 °C
- Dag: 1 (Mandag); Tid: 00:00 (Av)
- Åpent vindu funksjon: Av
- Timer: Av

Avvik på fabrikkinnstillinger kan forekomme fordi ovnen har blitt kvalitetstestet etter produksjon.

For å slå av ovnen trykk på . Når ovnen ikke er i bruk fjernes støpselet fra stikkontakten.

4.4 Innstilling av klokke og dager

Trykk på  i 3 sekunder. Displayet viser nå "d", Trykk  og  for å sette dag 1 til 7.

1. Mandag
2. Tirsdag
3. Onsdag
4. Torsdag
5. Fredag
6. Lørdag
7. Søndag

 
- Trykk  for å bekrefte dag og for å komme til klokkeinnstillinger hvor displayet viser: 
- Trykk  og  for å stille klokken.
- Trykk  for å bekrefte innstillingen og for å komme til minutt innstillingen, hvor displayet viser: 
- Trykk  og  for å stille minutter.
- Trykk  for å bekrefte alle innstillinger.

NB: Klokka og dager vil gå til fabrikkinnstillinger ved strømbrudd.

4.5 Velge program

Trykk på  for å velge program.

Når man trykker på programvelgeren  vil den gå i en syklus som vist i bilde under.



 **Komfort program:** Trykk  og  for å sette temperaturen fra 5-35 °C.

 **ECO program:** Trykk  og  for å sette temperaturen fra 1-31 °C.

Merk: Komfort-modus er 7°C. Hvis du bruker Komfort-modus og trykker på ECO, for å redusere temperaturen, reduseres den automatisk med standard* 4°C.

 **Frostsikring:** Innstilt temperatur er 7 °C. Denne temperaturen kan endres.

P1/P2/P3: Forhåndsinnstilt program.

NB: Husk å stille inn dager og klokken før program velges.

P1: (Mandag-Søndag) Programmet kan ikke endres



P2:(Mandag-Fredag) Programmet kan ikke endres



P2:(Lørdag-Søndag) Programmet kan ikke endres



P3:(Mandag-Fredag) Programmet kan endres



P3:(Lørdag-Søndag) Programmet kan endres



NB: P3 programmet kan endres.

1. Når P3 vises i displayet: Trykk  i mer enn 3 sek for å sette dag innstillingen.
2. Displayet viser , Trykk  og  for å sette  (mandag-søndag). Trykk  for å bekrefte, og nå kan klokken stilles.
3. Displayet vi ser , trykk  og  for å sette tiden fra 00-23. Trykk  for å velge program for hver time. (Komfort program , ECO program , Frostsikring . Indikatorlampe vil ikke lyse).
4. Gjenta til programmet er satt for alle timer og dager.

NB: Etter at klokken 23:00 er satt trykk  for å komme tilbake til innstillinger for dag. Når displayet viser  trykk  for å avslutte innstillinger for  programmet.

4.6 Timer / slå av ovn etter X timer

Trykk  en gang og displayet viser blinkende "0H".
Trykk  og  for å sette tiden fra 0 til 24 timer.
Trykk  igjen for å bekrefte innstillingen. Indikator lampen  lyser.
Ovnens slår seg av etter innstilt tid.

4.7 Åpent vindu funksjon

Manuell bruk av funksjonen når du lufter.
Trykk  en gang og lampen for åpent vindu  vil lyse.
Når den er aktivert  vil indikatorlyset for funksjonen blinke og ovnen slutte og varme. Når man er ferdig med slår man av ved å trykke på .
Ovnens returnerer til programmet.

4.8 Dette skjer i de forskjellige programmene/modusene ved strømbrudd

Merk: Ved strømbrudd vil ovnen starte automatisk. Du trenger ikke trykke på PÅ knappen.

Ved strømbrudd vil dette være hvordan ovnen agerer basert på

de ulike programmene/modusene den kjørte på før strømbruddet. Merk at for alle programmer unntatt Komfort-program, vil ovnen som standard gå tilbake til 7°C etter et strømbrudd.

Ovnens stod i Komfort-modus

Den vil huske Komfort-modus og gå tilbake til den siste innstilte temperaturen.

Ovnens stod i ECO-modus

Den vil starte på den fabrikkinnstilte* temperaturen på 7°C og bytte fra ECO til Komfort-modus.

Ovnens stod i Program-modus

Den vil starte på den fabrikkinnstilte* temperaturen på 7°C og bytte fra Program til Komfort-modus.

Ovnens stod i Anti frost-program

Den vil starte på den fabrikkinnstilte* temperaturen på 7°C og bytte fra Anti frost program til Komfort-programmet.

Klokken og kalenderen må stilles inn på nytt etter strømbrudd.

5.0 Stell og vedlikehold

5.1 Enkel rengjøring

1. Slå av bryteren og ta ut strømtilkoblingen.
Sørg for at ovnen er avkjølt før rengjøring.
2. Rengjør utsiden med en myk, fuktig klut, med eller uten en mild såpeløsning.
3. Bruk aldri slipende rengjøringsmidler eller senk ovnen ned i vann eller andre væsker. Ikke la vann eller andre væsker komme inn i ovnen, da dette kan forårsake brannfare og/eller elektrisk fare.
4. Vi anbefaler også regelmessig rengjøring av denne ovnen ved å forsiktig kjøre en støvsugerdyse over luftspaltene for å fjerne støv eller smuss som kan ha samlet seg utenfor ovnen.

FORSIKTIG: Ikke bruk sterke vaskemidler, kjemiske rengjøringsmidler eller løsemidler, da de kan skade overflatene på ovnen.

6.0 Energieffektivitet

Dette produktet er i samsvar med EU-forskriftene i økodesigndirektivet (2009/125/EF) for energirelaterte produkter.

Modellnavn	P nom kW	P min kW	P max,c kW
Beha Classic HC 5	0.500	0.500	0.500
Beha Classic HC 10	1.000	1.000	1.000
Beha Classic HC 15	1.500	1.500	1.500
Beha Classic HC 20	2.000	2.000	2.000

P_{nom} kW: Nominell varmeeffekt
P_{min} kW: Minimum varmeeffekt (veiledende)
P_{max,c} kW: Maksimal kontinuerlig varmeeffekt

Strømforbruk			
AV-modus	P _o	0	W
Standby-modus	P _{sm}	0.40	W
Tomgangsmodus	P _{idle}	0.40	W
Nettverk-standby	P _{nsm}	N/A	W
Standby-modus med display-info eller status			ja
Sesongbasert energieffektivitet for romoppvarming i aktiv modus (bærbar)	η S _{on}	95.0	%
Sesongbasert romoppvarming-senergi	η S _{on}	92.0	%

6.1 Tekniske parametere

F2 og F3 er korreksjonsfaktorer som representerer et positivt bidrag til den sesongmessige energieffektiviteten for romoppvarming. Sesongmessig energieffektivitet for romoppvarming for elektriske veggmonterte varmeovner med en nominell varmeeffekt over 250 W skal ikke være mindre enn 38 %.

Type varmeeffekt/romtemperaturkontroll (velg én)		
ett-trinns varmeeffekt og ingen romtemperaturkontroll		
to eller flere manuelle trinn, ingen romtemperaturkontroll		
med mekanisk termostat romtemperaturkontroll		
med elektronisk romtemperaturkontroll		
elektronisk romtemperaturkontroll pluss dagtimer		
elektronisk romtemperaturkontroll pluss uketimer	ja	7

Andre kontrollalternativer (flere valg mulig)		
romtemperaturkontroll, med bevegelsesdeteksjon		
romtemperaturkontroll, med åpent vindu-deteksjon	ja	1
avstandskontroll		
adaptiv startkontroll		
tidsbegrensning	ja	1
lyssensor		
selvlærende funksjonalitet		
kontrollnøyaktighet		

Energi effektivitet for Beha Classic HC XX ovner: 38%.

7.0 Avfallshåndtering

Dette apparatet er merket i henhold til EU-direktiv 2012/19/EU angående håndtering av elektrisk og elektronisk avfall (Waste Electrical and Electronic Equipment-WEEE). Sørg for at dette produktet avhendes på riktig måte, slik at det ikke utgjør en helse- eller miljørisiko.



Symbolet  på produktet eller på dokumentene som følger med det, viser at dette produktet ikke må behandles som husholdningsavfall. Lever det til et autorisert mottak for resirkulering av elektrisk og elektronisk utstyr. Avhenting må skje iht. de lokale renova-

sjonsforskriftene. For nærmere informasjon om håndtering, kassering og resirkulering av dette produktet, kontakt kommunen, renovasjonsvesenet eller forretnin-gen der du anskaffet det.

7.1 Resirkulering av innpakning

Komponent	Materiale	Resirkulering
Emballasje	PAP 20	Papp og papir
Skrue pose	PE	Plast

CONTENT

1.0 Technical information	9
2.0 Safety information	10
3.0 Installation	11
4.0 Using the heater	11
5.0 Care and maintenance	13
6.0 Energy efficiency	13
7.0 Waste management	14

Please read the manual carefully before use of the heater and save it for later reference. This user guide is also available at beha.no.

1.0 Technical information

Factory set temperature is 22 °C. The thermostat can be set at min. 1 °C in ECO mode. Maximum temperature is 35 °C.

The heater is IP24 tested and approved for installation in bathrooms and utility rooms, and can be installed according to current regulations. The heater has week timer that can be used for saving energy.

1.1 By power outage

The heater returns to your set comfort temperature. For other modes/settings see chapter 4.8.

1.2 Open window detection

If the open window function is activated and the temperature drops several degrees, within several minutes, the heater will activate this function and stop heating. After 1 hour the heater return to the mode/settings it had before the open window was activated. It can also be deactivated with pressing the open window button.

2.0 Safety information

When using any electrical appliance, basic precautions should always be followed to reduce the risk of fire and injuries.

Please read the entire user manual before using heater.

1. Before use, remove all packaging.
2. Turn the switch to OFF. Remove the plug from the wall socket when the heater is not in use and when cleaning.

This heater is for room heating.

CAUTION! Parts of this product will become hot and may cause burns. Pay especially attention where children and vulnerable people are present.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.



Warning: In order to avoid overheating, do not cover the heater.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised. Furthermore, do not use the heater in areas

where gasoline, paint, or flammable liquids are used or stored. The heater shall not be used in explosives areas.

Warning: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

The wall socket in which the heater is connected should be visible and accessible.

The heater must not be located immediately below a wall socket. Do not operate any heater with a damaged cord or plug. The cable must not come into contact with hot surfaces of the heater during operation.

Do not cover the cord with carpets. Do not step on the cable.

Ensure that no foreign objects are placed in the heater's air outlets as it can cause electrical failure or fire.

When cleaning or relocating or when the heater is not in use, the heater should be switched off and the cord unplugged. In that order. Do not remove the plug from the socket by pulling the cord. Remove the cord from the socket by gripping the plug and gently pull it out of the wall socket.

Do not touch the heater with wet hands.

The heater must be in an upright position.

The heater should not be repaired, dismantled or modified by unauthorized personnel. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool. Fixed heaters are to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

 
Do not use this heater if it has been dropped or if there are visible signs of damage to the heater.

Warning: The heater should be located away from furniture, curtains or other flammable objects.

Warning: In order to avoid a hazard due to inadvertent resetting of the thermal cutout,

this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

3.0 Installation

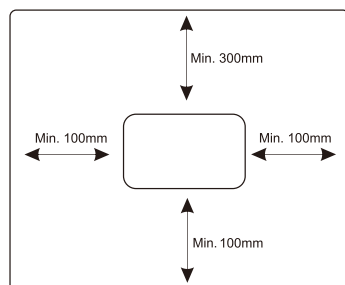


Make sure that the distance from walls and objects is respected.

3.1 Electrical connection and use

Before connecting, please ensure that the voltage is 230-240V ~ 50-60 Hz. The heater should be connected to a socket in the room it is intended to be used. Do not connect the heater to sockets in adjacent rooms using an extension cable.

3.2 Mounting the heater

 - Put the hanging rack on the wall as a guide ruler (please make sure the holes are parallel), use a pen to mark the hole position
- Drill holes on the wall with 8mm drill bit and insert the plastic wall plug.
- Fasten the hanging rack on the wall with the screws, do make sure the hanging rack is in correct direction
- Gently insert the heater body of the bottom to the hanging rack first and then push the heater body to be hooked on the whole hanging rack.

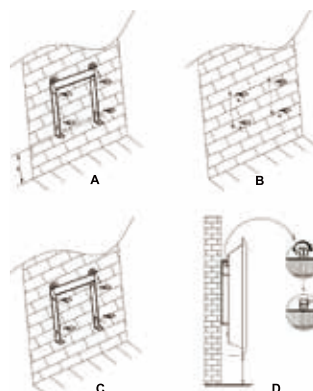

Warning! The distance from the floor to the lower edge of the heater should be min. 10cm.

Warning! When drilling holes, always ensure there is no wiring, pipework, etc. in the area to be drilled.


Warning! Before plugging in the unit make sure the radiator is properly attached to the wall.

3.3 Heater sizes

Product name	Watt	Height (mm)	Width (mm)	Depth (mm)
Beha Classic HC 5	500	435	515	105
Beha Classic HC 10	1000	435	515	105
Beha Classic HC 15	1500	435	645	105
Beha Classic HC 20	2000	435	815	105

4.0 Using the heater

 4.1 Control panel

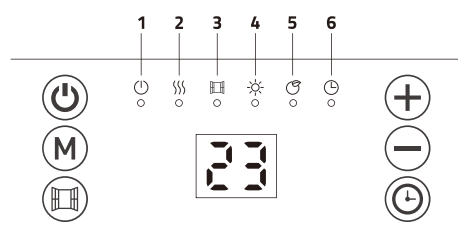

⏻	Standby
M	Mode selection
🪟	Open window function
+	Increase function
-	Decrease function
🕒	Timer

- Standby: on/off
- Heating status
- Open window function
- Comfort mode
- ECO mode
- Timer

4.2 How to use the heater

Plug the appliance to AC 230-240V 50-60Hz socket and press down the on/off switch with a beep sound. The indicator light  is on.

4.3 Factory default

- Heating mode: comfort mode
- Target temperature setting: 22 °C
- Date: 1 (Monday); Time: 00:00 (Off)
- Window open function: Off
- Timer: Off

If default settings are different, it will simply be because the unit has been quality tested after production.

To stop the heater working, press  to turn off the heater. Unplug the product when it's not in use.

4.4 Clock and day of week setting

Press down  3 secs to enter clock and day of week setting. The screen now display “d”, press  and  to select the day from 1-7.

1. Monday
2. Tuesday
3. Wednesday
4. Thursday
5. Friday
6. Saturday
7. Sunday

 
- Press  to confirm day setting and enter the clock hour setting, with the screen display: 
- Press  and  to set the current hour.
- Press  to confirm hour setting and enter the minute setting, with the screen display: 
- Press  and  set the current minute.
- Press  to confirm all settings.

Note: The clock and calendar will be reset to factory default if without power supply.

4.5 Heating mode

Press  to enter mode selection.

By pressing  heating mode runs in a continuous cycle as below:



 **Comfort mode:** Press  and  to set the temperature from 5-35 °C.

 **ECO mode:** Press  and  to set the temperature from 1-31 °C.

Note: Comfort mode is 7°C. If you are using Comfort mode and press ECO mode to reduce the temperature, ECO mode automatically reduces the temperature by default* 4°C.

 **Anti-frost mode:** The screen display. The target temperature 7 °C. The temperature can't be adjusted.

P1/P2/P3: Pre-set heating program.

Note: If the clock and day setting are not finished, the first time to enter P1/P2/P3 program setting, it is requested to set day and clock setting in advance.

P1:(Monday-Sunday) Unadjustable program



P2:(Monday-Friday) Unadjustable program



P2:(Saturday-Sunday) Unadjustable program



P3:(Monday-Friday) Adjustable program



P3:(Saturday-Sunday) Adjustable program



Note: P3 are adjustable program setting.

1. When under P3 mode, press  over 3 secs to enter day setting.
2. The screen displays , press  and  to set from  (Monday-Sunday). Press  to confirm and enter hour setting.
3. The screen displays , press  and  to set from 00-23. Press  to choose heating mode for every hour (Comfort mode  or ECO mode  or anti-frost mode ). The indicator light will not be on.)
4. Repeat the operation until you have completed the schedule of every hour and every day.

Note: After setting heating mode for hour 23, press  to come back to day setting. Note: when screen displays , press  finish all setting with display of .

4.6 Timer off function

Press  one time, the screen display “OH” and keeps flashing. Press  and  to set timer from 0-24 hours. Press  again to confirm setting, then the indicator light  is on. The heater will turn off after the set amount of time has passed.

4.7 Open window function

Press  one time and the indicator light  is on. If open window function is activated, the indicator light  keeps flashing and stops heating. Press  again to quit open window function and back to previous working situation.

4.8 In case of power outage this happens in the different programs/modes

Note: In case of power outage, the heater will start automatically. You do not need to press the ON button.

In the event of a power outage this is how the heater acts

depending on which program/mode it was running on prior to the power failure. Note that for all programs/modes except Comfort mode, the heater will by default return to 7°C after a power outage.

The heater was running on Comfort mode

It will remember Comfort mode and revert to the last set temperature.

The heater was running on ECO mode

It will start at the factory set* temperature of 7°C and change mode from ECO to Comfort mode.

The heater was running on a Program mode

It will start at the factory set* temperature of 7°C and change mode from Program mode to Comfort mode.

The heater was running on a Anti-frost mode

It will start at the factory set* temperature of 7°C and change mode from Anti-frost mode to Comfort mode.

The clock and calendar need to be set again after power outage.

5.0 Care and maintenance

5.1 Easy cleaning

1. Turn the switch off and remove the power connection. Make sure the heater is cooled down before cleaning.
2. Clean the outside with a soft, moist cloth, with or without a mild soap solution.
3. Never use abrasive cleaners or submerge the heater in water or other liquids. Do not allow water or other liquids to get into the heater, as this could create a fire and/or electrical hazard.
4. We also recommend the periodic cleaning of this heater by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated outside the heater.

CAUTION: Do not use harsh detergents, chemical cleaners, or solvents as they may damage the surface finish of the plastic components.

6.0 Energy efficiency

This product complies with the EU regulations of the Ecodesign Directive (2009/125/EC) for energy-related products.

Model identifier	P nom kW	P min kW	P max,c kW
Beha Classic HC 5	0.500	0.500	0.500
Beha Classic HC 10	1.000	1.000	1.000
Beha Classic HC 15	1.500	1.500	1.500
Beha Classic HC 20	2.000	2.000	2.000

Pnom kW: Nominal heat output
Pmin kW: Minimum heat output (indicative)
Pmax,c kW: Maximum continuous heat output

Power consumption			
In off mode	P o	0	W
In standby mode	P sm	0.40	W
In idle mode	P idle	0.40	W
In network standby	P nsm	N/A	W
Standby mode with display information or status			Yes
Seasonal space heating energy efficiency in active mode(Portable)	η S,on	95.0	%
Seasonal space heating energy efficiency in active mode(Fixed)	η S,on	92.0	%

6.1 Technical parameter

F2 and F3 are correction factors that represent a positive contribution to the seasonal energy efficiency for space heating. Seasonal space heating energy efficiency for electric wall-mounted heaters, with a nominal heating output above 250W, shall not be less than 38%.

Type of heat output/room temperature control (select one)		
single stage heat output and no room temperature control		
two or more manual stages, no room temperature control		
with mechanic thermostat room temperature control		
with electronic room temperature control		
electronic room temperature control plus day timer		
electronic room temperature control plus week timer	yes	7

Other control options (multiple selections possible)		
room temperature control, with presence detection		
room temperature control, with open window detection	yes	1
distance control option		
adaptive start control		
working time limitation	yes	1
black bulb sensor		
self-learning functionality		
control accuracy		

Energy efficiency for Beha Classic HC XX heaters: 38%

7.0 Waste management

This appliance is marked in accordance with EU Directive 2012/19/EU regarding the handling of electrical and electronic waste (Waste Electrical and Electronic Equipment-WEEE). Make sure that this product is disposed in the correct manner, so that it does not constitute a health or environmental risk.



The symbol  on the product or on the documents accompanying the product, indicates that this product may not be treated as household waste. Hand it over to an authorized reception for recycling of electrical and electronic equipment. Disposal must take place in

accordance with the local waste disposal regulations. For further information, treatment, recovery, and recycling of this product, contact your local council, waste disposal service or the shop where you purchased it.

7.1 Recycling of packaging

Component	Material	Recycling
Packaging	PAP 20	Carboard and paper
Screw bag	PE	Plastic

BEHA

BEHA TARGET AS - a part of Beha Group

Org.nr. 981509013

Evjeløkkå 3

1661 Rolvsøy

beha.no

Service: service@behatarget.no